





### Adding Team Drivers


Co-drivers can be added to the app by clicking on the driver's name in the top-right corner of the screen and selecting the **Add driver** button.

The co-driver will be prompted to enter their login credentials. Up to three drivers can be added per vehicle.

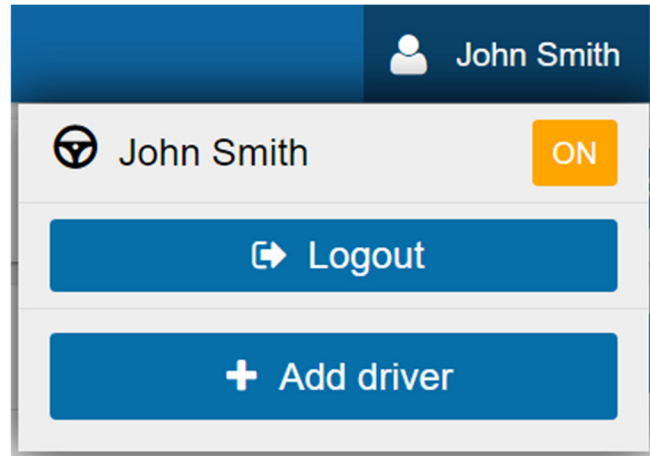

Once logged in, the names of all drivers will be displayed in the user list.

When multiple drivers are logged in, the steering wheel —— icon will indicate the currently active driver.

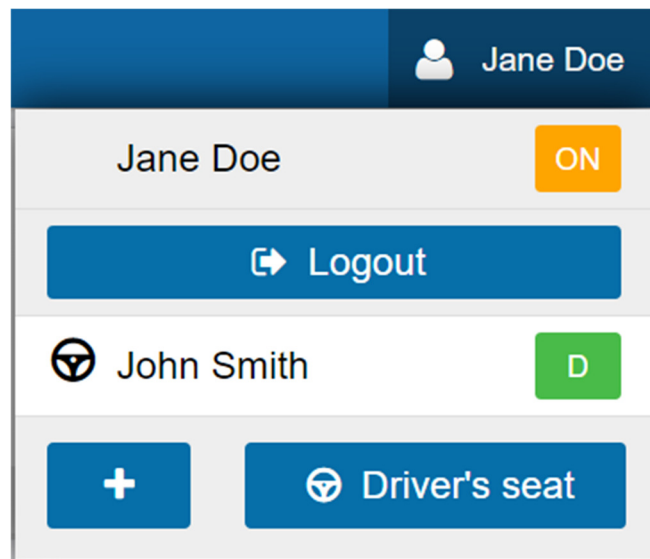

### Switching Active Drivers

To switch who is the active driver, use the **Driver's seat** button to switch to the new active driver.

The active driver will have their duty status change automatically. The co-driver will need to change their status manually through the interface.

If the active driver logs out, the co-driver will become the new active driver.

### Change Duty Status

The co-drivers will share the app interface to adjust their individual duty statuses.

To become the active user of the interface, click on your name from the driver list.

Once you are the active user, you will see your name appear at the top of the driver list. At this point you can adjust your duty status without affecting the duty status of your co-drivers.